

NBS Cam

Avoid vehicle blind spots

User Guide

MC727



Digital LCD Color Monitor

Single view (7")

Please read this manual thoroughly before operating the unit,
and keep it for future reference.

V1711.01

1.855.730.5555
www.nbs-cam.com

CONTENT

1. Precautions	3
2. Product features	5
3. Technical specifications	5
4. Accessories	6
5. Parts identification	7
6. Remote control operation	8
7. Basic operation	9
8. Menu	12
1. Image	12
2. Option	13
3. System	14
9. Troubleshooting	14

8. MENU

 
Press CH- to select BLUE BACK.

SYSTEM	
COLOR-SY	AUTO
BLUE BACK	ON
HORIZONTAL	↔
VERTICAL	↕
ZOOM	16:9

Press   to select ON/OFF.

Press CH- to select ZOOM.

SYSTEM	
COLOR-SY	AUTO
BLUE BACK	ON
HORIZONTAL	↔
VERTICAL	↕
ZOOM	16:9

Press   to select 16:9 or 4:3.

9. TROUBLESHOOTING

The symptoms described below do not necessarily mean a failure within the display. Please check the following items before you initiate request for repair.

PROBLEMS	POSSIBLES CAUSES / SOLUTIONS
No picture, no sound	Improper connection of automobile adapter. Use of un-authorized power supply. Power switch is on OFF position.
No picture	Check whether AV cable is properly connected.
No sound	Check whether audio wire is properly connected or the sound volume is turned off or set too low.
Dark picture	Check whether brightness and contrast are adjusted correctly; Check whether the environments temperature is too low.
No color	Adjust the color settings.
Upside down or lateral inverted picture	Use the remote control horizontal /vertical selection switch to set proper orientation.
No reversing function (i.e. Picture)	The black wire of the monitor AV cable to the reversing light may be loose. The red wire from the monitor may be loose.