

User Guide MC736



Digital LCD Color Monitor Multiple view (7")

Please read this manual thoroughly before operating the unit, and keep it for future reference. V1711.01

> 1.855.730.5555 www.nbs-cam.com

CONTENT

1.	Precautions	3
2.	Product	5
3.	Monitor installation	6
4.	Connections	7
5.	Parts identification	8
6.	Remote control operations	9
7.	Menu operations	11
8.	Specifications	13
9.	Troubleshooting	14



1. PRECAUTIONS

Storage and keeping

- 1. Do not expose the monitor to excessive heat or cold. The storage temperature of this device is $-30\sim+80^{\circ}$ C, and the operating temperature is $-20\sim+70^{\circ}$ C. The humidity is RH90%
- 2. Never use this device near a bathtub, wash basin, kitchen, damp basement, swimming pool or similar places.
- 3. Never use this device in environments with excessive moisture, dust or smoke.
- 4. Avoid dropping or striking this device.
- 5. Avoid using this device in enclosed spaces, areas with excessive vibration or subject to severe impacts.
- 6. Never puncture, scratch or use abrasive cleaning materials on this device.
- 7. Do not place cables where they may be pinched or stepped on.
- 8. Leave at least a 2" space between the monitor and walls, cabinets or other objects to allow adequate air circulation around the device.
- 9. The monitor is not designed to be waterproof.

Operating precautions

- 1. The device may be powered by a 12 or 24 volt automotive battery or vehicle electrical system.
- 2. Make sure all cables are connected properly. Observe polarity. Improper cable connections may damage the monitor. Remove the power cable connections when you do not intend to use the unit.
- 3. Operate the unit according to the instruction.

WARNING!

- High voltage is present within the monitor. The opening of the case should be by professionals.
- 2. Do not watch the video while driving unless you are monitoring the rear view camera display.

SPECIAL NOTICE

Occasionally, a few highlights or dark spots may occur on the LCD screen. This is a very common phenomenon in active matrix display technology, and doesn't necessarily indicate any defects or faults. Never try to repair this device by yourself. In case of any problems, please turn off the display at once and notify our company or authorized dealer. The monitor is a complex device. Any disassembly or modification may lead to damage and void the warrantee.



1. PRECAUTIONS

Maintenance

- 1. Remove all the cable connections from the monitor before cleaning the device.
- 2. Use a mild household detergent and clean the unit with a slightly damp, soft cloth.
- 3. Never use strong solvents such as thinner or benzine, as they might damage the finish of the device.



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,

DO NOT REMOVE COVER (OR BACK).

NO USER-SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This symbol is intended to alert the user not to dispose of electrical and electronic equipment.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your warrantee and necessitate expensive repairs.

Declaration of conformity



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.







2. PRODUCT

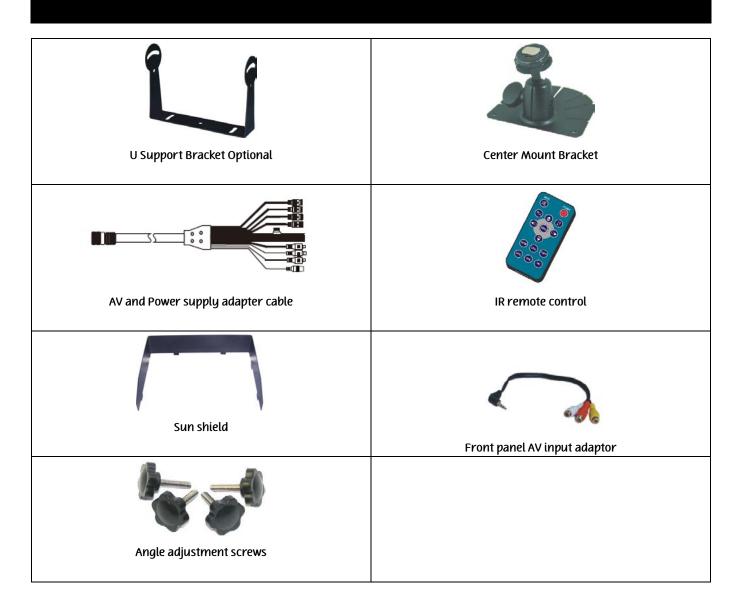

SPECIAL NOTICE


Accessories may be different for different applications.



3. MONITOR INSTALLATION


Installation of the sun shield

As illustrated, insert the hooks (1), (2), (3), (4) of the sun shield into the monitor.

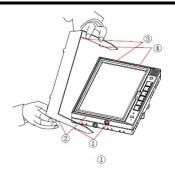

Installation of the U-support bracket


- 1) As illustrated in the picture, align the bracket with monitor.
- 2) Adjust the bracket to proper angle and tighten screws.

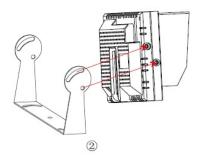




Installation of the center mount bracket

- $\textcircled{\scriptsize{1}}$ Loosen the knob on top of the center mounting bracket in picture $\textcircled{\scriptsize{4}}.$
- 2) Adjust monitor level by sliding the support to the desired height.
- $\ensuremath{\mathfrak{J}}$ Adjust the angle of the monitor and tighten the knob on the center mount bracket.

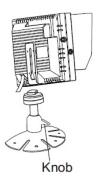



4. CONNECTIONS

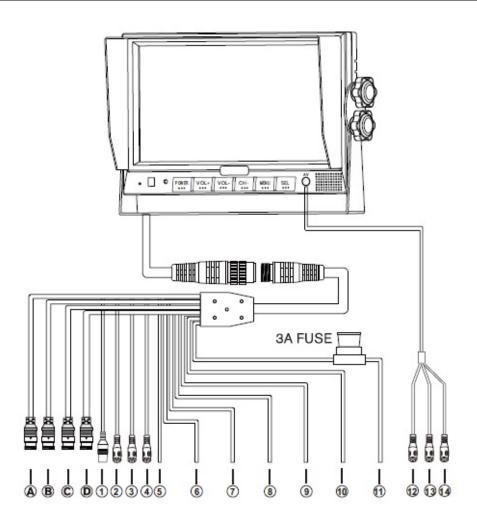

(A) Camera 1 (B) Camera 1 (C) Camera 1 (D) Camera 1

① AUX audio input

4 White: Audio output

7 Green: Trigger 3

10 Black: Ground

1 DVD Audio input (white RCA)

② Green: Rec. V. output

(5) White: Trigger 1

® Brown: Trigger 4

11) Red: Power

MULL (red RCA)

3 Yellow: Live V. output


6 Blue: Trigger 2

9 Yellow: Split trigger

12 DVD video input (yellow RCA)



5. PARTS IDENTIFICATION

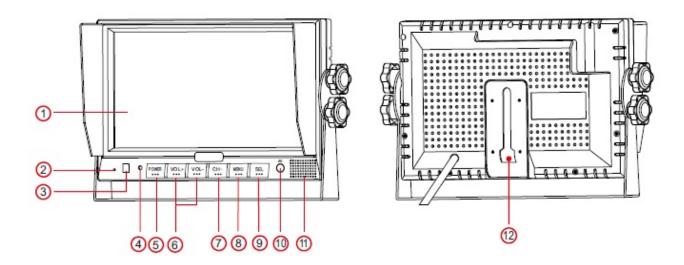


- ① Color LDC Screen
- ② LDR
- 3 Remote signal receiver window
- **4** Power indicator

The green light / red light is on when monitor is powered / standby: The light is off when the power is off.

- S Power off / on button
- 6 To increase / decrease the volume and switch between values of each sub-menu
- ② Menu selection and display mode (single, dual, triple, quad-view, PIP image) selection
- 8 Menu control button
- 9 Jump key selector. Fast jump to the display mode specified by SYSTEM SETUP JUMP KEY
- 10 DVD A/V input
- 11 Loudspeaker
- 12 Installation port for center mount bracket



6. REMOTE CONTROL OPERATIONS

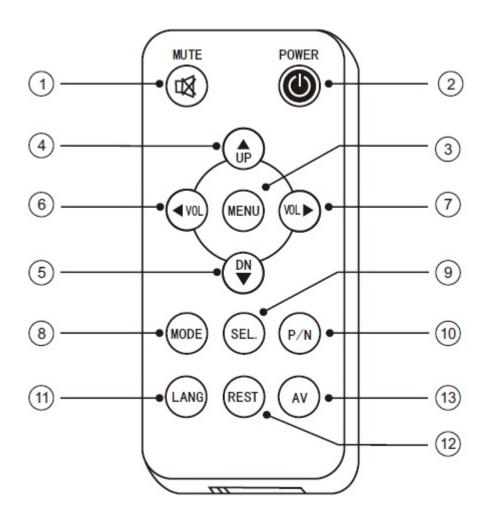

NOTICE

- 1. Please align the remote control with the infrared-receiving window on the monitor to operate.
- 2. Never disassemble the remote control or allow it to drop, or become wet.
- 3. Press the control buttons firmly. Allow 2 seconds for the picture to change.



www.nbs-cam.com

6. REMOTE CONTROL OPERATIONS

	Press to mute / unmute the volume
2	POWER: Press to turn on/off the monitor.
3	MENU: Press to show menu.
4	UP: Press to select the upper setting.
(5)	DN: Menu selection and display mode (single, dual, triple, quad-view, PIP image) selection.
6	VOL- Press to decrease the volume and switch between values of each sub-menu.
7	VOL+ Press to increase the volume and switch between values of each sub-menu.
8	MODE (Picture mode): Menu selection and display mode (single, dual, triple, quad-view, PIP image) selection.
9	SEL: Jump key selector. Fast jump to the display mode specified by SYSTEM SETUP – JUMP KEY.
10	P/N: PAL / NTSC TV system selector
11)	LANG: Press to select language of display.
12	REST: Press to restore factory settings.
13	AV:



Press to go to / leave DVD channel.


① MUTE:

7. MENU

OSD Setting

SCALE:

To turn on / off electronic distance label. When set as ON, electronic distance label will be displayed when rear view camera (camera 3) is activated.

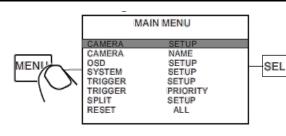

CAMERA SETUP CAMERA NAME OSD SETUP SYSTEM SETUP TRIGGER SETUP TRIGGER PRIORITY SPLIT SETUP RESET ALL

MAIN MENU

VOL+ / VOL-

OSD SETUP

SCALE ON
INPUT SCAN OFF
BOUNDARY WHITE
LANGUAGE ENGLISH
V11:A00A20130909 (to be updated)

INPUT SCAN:

To turn on / off auto identification of camera inputs. When INPUT SCAN is set as ON, monitor will display connected cameras and skip inputs not in connection.

BOUNDARY:

To set color of the separation line between camera inputs. White, gray, black and uncolored are available.

LANGUAGE:

To set OSD language. English, French, Dutch, Spanish, German and Italian are available.


SOFTWARE VERSION:

To be updated at all times.

Trigger setting

TURN IMAGE:

To set the camera input(s) to be displayed when left-side camera (camera 1) / right-side camera (camera 2) is activated. When set as SINGLE, correspond camera input will be displayed when

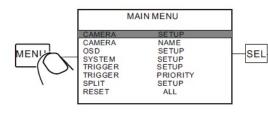

either camera is activated. When set as SPLIT, split image of left-side and rear view camera will be displayed when left-side camera is activated; split image of right-side and rear view camera will be displayed when right-side camera is activated.

REAR IMAGE:


To set the camera input(s) to be displayed when rear view camera is activated. When set as BACK, the rear view camera will be displayed when activated. When set as TRIPLE, left-side, right-side and rear view camera will be displayed.

TRIGGER DELAY:

To set the delaying time of video display when trigger signal goes off. Delaying time frame: 0-30 seconds.

SPLIT SCREEN:


To set the camera input(s) to be displayed when "split" trigger wire is activated. LEFT / RIGHT is to set the camera input to be displayed on the left / right side of monitor screen. AUDIO is to set the audio output from any of the four cameras.

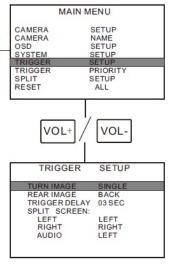



7. MENU

Jump Key Setting

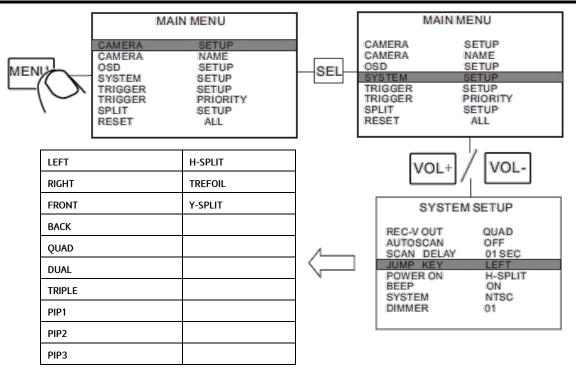

REC-V OUT:

To set the camera input(s) to be recorded when connected to DVR via the green RCA wire. Left-side, right-side, front view, rear view camera and quad view image can be selected.

AUTOSCAN:

To set the auto scanning function. When AUTOSCAN is set as ON, monitor will automatically switch between connected camera inputs and quad image.

SCAN DELAY:

To set the switching time of AUTOSCAN. Switching time frame: 0-60 seconds.

JUMP KEY:

To set the shortcut display mode from the 13 modes to the left. It can be activated by jump key selector.

P-ON MODE:

To set the default display model from the 13 modes to the left or STANDBY mode.

BEEP:

To turn on / off the warning tone. Default setting is ON and there will be a beeping sound when menu is being operated.

SYSTEM:

To set TV system: PAL / NTSC.

DIMMER:

To set backlighting brightness level of screen. Five levels and AUTO option are available; the higher the level, the brighter. When set as AUTO, backlighting automatically adjusts in accordance with the outer brightness.



8. SPECIFICATIONS

Dimension	7"		
TV System	NTSC/PAL		
Resolution	800 (W) × 3 (RGB) × 480 (H)		
Brightness	400cd/m²		
Contrast	500:1		
Viewing Angle	U: 50, D: 70, L: 70, R: 70		
Aspect Ratio	16:9		
Pixel Pitch (mm)	0.0642 (W) x 0.1790 (H)		
Operating Temperature	- 20 °C ~ + 70 °C		
Storage Temperature	- 30 °C ~ + 80 °C		
Power Consumption	Max. 25W		
Power Output to Camera	Max. 4 × 300mA, 12V		
Power Supply	10V~32V		
Video Input	4 video inputs for camera - peak value: 1Vp-p, impedance: 75 ohm		
video iriput	1 DVD input - peak value: 1Vp-p, impedance: 75 ohm		
Audio Input	4 audio inputs for camera - peak value: 1Vp-p, impedance: 4.7K ohm		
Audio Iriput	1 AUX audio input - peak value: 1Vp-p, impedance: 4.7K ohm		
Video Output	1 DVD audio input - peak value: 1Vp-p, impedance: 4.7K ohm		
ιαευ σαιραι	Video Ouput 1 REC Video output - peak value: 1Vp-p, impedance: 75 ohm		
Audio Output	1 LIVE Video output - peak value: 1Vp-p, impedance: 75 ohm		
лиино Оигрин	Audio Output 1 REC audio output - peak value: 1Vp-p, impedance: 4.7K ohm		



9. TROUBLESHOOTING

The symptoms described below do not necessarily mean a failure within the display. Please check the following items before you initiate request for repair.

PROBLEMS	POSSIBLES CAUSES / SOLUTIONS
No picture, no sound	Improper connection of automobile adapter. Use of un-authorized power supply. Power switch is on OFF position.
No picture	Check whether AV cable is properly connected.
No sound	Check whether audio wire is properly connected or the sound volume is turned off or set too low.
Dark picture	Check whether brightness and contrast are adjusted correctly; Check whether the environments temperature is too low.
No color	Adjust the color settings.
Upside down or lateral inverted picture	Use the remote control horizontal /vertical selection switch to set proper orientation.
No reverse gear activated screen (i.e. Picture)	The black wire of the monitor AV cable to the reversing light may be loose. The red wire from the monitor may be loose.

WARNING

Monitor systems are strictly intended to be installed as a supplement and not intended for use as substitutes for rear-view mirror devices, or for any other standard motor vehicle equipment required to be installed on vehicles by law. Our products are no substitute for proper defensive driving techniques, observance of traffic laws and motor vehicle safety regulations.

